
Straight Percentage Tax Rate Programming

When tax requirements may be met using a straight percentage rate, use the following method to program a tax as a straight percentage.

Programming Straight Percentage Tax Rates and Status

1. Turn the control lock to the **PGM** position.
2. If the tax is a percentage rate, enter the tax rate with a decimal. (0.000-99.999). It is not necessary to enter preceding zeros, but you must enter the decimal. For example, for 6%, enter 06.000 or 6.000.
3. Enter **00**. (Entries here set tax options for value added tax and or Canadian GST. See “Straight Percentage Tax Rate Programming” on page 117 for details.)
4. Press the appropriate Tax Shift key for the tax you are programming.
5. Press the **CASH** key to end programming.

Tax Rate Programming Flowchart

